




RACING INSTRUMENTS
Get Ahead... 

REFERENCE MANUAL

Multifunctions istrument
Tire pressure gauge & Stopwatch



Part number : HPM4+STW

MADE IN ITALY



STOPWATCH MODE

1 - Power ON
Press



Auto Power OFF after 10 minutes of inactivity. To force the Power OFF, press and Hold L1 button

2 - The display show L1 - L2 - L3 - L4

L1 is the DRIVER 1's START - STOP Button ----> **S1** is the Split time button
L2 is the DRIVER 2's START - STOP Button ----> **S2** is the Split time button
L3 is the DRIVER 3's START - STOP Button ----> **S3** is the Split time button
L4 is the DRIVER 4's START - STOP Button ----> **S4** is the split time button

By pressing L1 button the Lap Time Driver 1 starts. - The S1 button is it for the split time.
At the next press of L1 Button (first Lap) the display show the current Lap Time.

In the following laps the display show :


Current Lap [**L05**]

Current Lap Time [**0:45.96**]

The time difference with the Best Lap [**+0.58**]

The Best Lap time [**0:45.38**]

The Split times **S1 - S2 - S3 - S4 - S5- S6 - S7 - S8 - SS** (SS is the last Split Time)

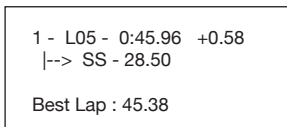

Same procedure for L2 - L3 - L4

 
SETUP DEVICE - DELETE DATA - READ DATA

Press and hold L1 button for 2 seconds




The display show which buttons to press for each Menu

DELETE DATA



READ DATA

 

SET DEVICE



Follow the instructions on the display to complete all operations.

Read data

By pressing S2 button, the display shows the current test Lap times.
With S2 - S3 buttons it is possible to read the Lap Split Times.

The + - Buttons is used to scroll the DRIVER 1 -2 - 3 - 4 Lap Times.

To exit to main MENU press

FUNZIONI PARTICOLARI DA ATTIVARE/DISATTIVARE

BACKLIGHT DISPLAY

The light sensor at the top of the instrument set automatically the display's backlight intensity.

MENU LANGUAGE

It is possible to set the menu languages to ITA - FRA - ENG .

 
PRESSURE GAUGE MODE

- 1 - Power ON**
Press button



Auto Power off after 2,5 minutes if inactivity.
To Power off manually , press and hold the ON/OFF button.

- 2 - The display shows the test number [01] :**



Measure and set the pressure of the tire shown on the display. When the pressure is set, press MEM button to save it




- 3 - The display shows the saved pressure value and the next tire to measure**




Repeat the procedure for the other tires.

- 4 - The display shows all the saved pressures value - COLD TIRES PRESSURE**

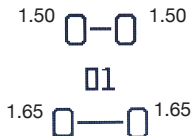

- 5 - Repeat the same procedure for the HOT TIRES PRESSURE**

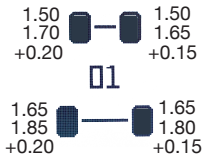

For a new Test press



CONFIGURE - RESET - READ MEMORY ----- Press



The display shows all the Menu and which buttons need to press .

RESET DATA



READ SAVED PRESSURES



CONFIGURE



Follow the instructions shown on the display.

PRESSURE DIFFERENCE FUNCTION

This function is used to show the difference from COLD and HOT tire pressures on the display.

PRESSURE SHOOT® FUNCTION

This function is used to save the HOT tire pressures without pressing MEM button.

DISPLAY BACKLIGHT FUNCTION

With the light sensor the instrument set automatically the backlight of the display. It can reduce the battery life.

LANGUAGE MENU

ENGLISH - FRENCH - ITALIAN language menu available

Switch to **STOPWATCH** mode

Press





For Technical support visit

www.prismaelectronics.com



MADE IN ITALY